


# Offset Diverter Installation



To assemble the offset diverter, simply slide the "B" elbow on one leg of the diverter and the zig-zag leg on the other. NOTE: The crimped end of the downspout part fits INSIDE the part below.

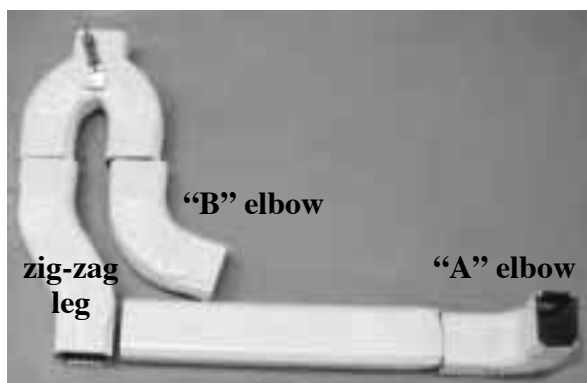

Use a section of your existing downspout and slip it over the "B" elbow. Cut the downspout to create your desired length of offset.



Crimp all four corners of the end of downspout section that is to go inside the "A" elbow.

The crimped bottom of the zig-zag leg fits down inside of a section of downspout headed to the ground.

Use sheet metal screws to secure ALL locations where downspout parts are joined together.

